

**SOFT TOUCH for PNEUMATIC RIVETERS**  
**9181-34YM/115 RIVET, 9181-34YM/230 RIVET**  
**9181-34WM/115 RIVET, 9181-34WM/230 RIVET**



**UNITROL ELECTRONICS, INC.**  
**702 LANDWEHR ROAD**  
**NORTHBROOK, IL 60062**  
**847-480-0115**  
**techsupport@unitrol-electronics.com**



## MODEL:



- ☐ 9181-34YM-RIVET/115
- ☐ 9181-34YM-RIVET/230
- ☐ 9181-34WM-RIVET/115
- ☐ 9181-34WM-RIVET/230
- ☐ 9181-34RCR cable initiation replacement kit
- ☐ 9181-34RCRA pneumatic pilot initiation

**Distributed by Rockford Systems**



## MODEL:

- ☐ RST300-115-RIVET (115VAC)
- ☐ RST300-230-RIVET (230VAC)

## Options:

- ☐ RST-403
- ☐ RST-404

## SERIAL NUMBER:

**Thank you** for purchasing this Unitrol SOFT TOUCH system for your pneumatic riveting machine. It is designed to protect your operator from serious pinch point injury. Please let us know if there are any questions or problems with the installation or use of this product. You can contact us:

### By Phone:

Monday - Friday 9:00 - 5:00 CT: 847-480-0115.

### By Email:

[techsupport@unitrol-electronics.com](mailto:techsupport@unitrol-electronics.com)

### By Regular Mail:

Unitrol Electronics, Inc.  
Technical Support  
702 Landwehr Road



# WARRANTY

Unitrol Electronics provides a 5-year limited warranty to cover all of this SOFT TOUCH system. The warranty periods are determined using the date the new control was originally shipped from Unitrol Electronics. All warranty coverage is FOB Northbrook, Illinois.

This warranty, except for exclusions shown herein covers the following items:

**DURING YEAR #1:** All parts (exclusive of fuses) that fail due to manufacturing defects. Necessary labor to repair control that has failed due to manufacturing defects.

**DURING YEAR #2:** 80% cost of all parts (exclusive of fuses).

80% cost of necessary labor to repair control that has failed due to manufacturing defects.

**DURING YEAR #3:** 60% cost of all parts (exclusive of fuses).

60% cost of necessary labor to repair control that has failed due to manufacturing defects.

**DURING YEAR #4:** 40% cost of all parts (exclusive of fuses).

40% cost of necessary labor to repair control that has failed due to manufacturing defects.

**DURING YEAR #5:**

20% cost of all parts (exclusive of fuses).

20% cost of necessary labor to repair control that has failed due to manufacturing defects.

## EXCLUSIONS TO WARRANTY

Any expense involved with repair of control by other than Unitrol Electronics personnel that has not been authorized in advance and in writing by an officer of Unitrol Electronics.

All costs for freight, to and from Unitrol Electronics, are excluded from this warranty

All field service labor, travel expense, and field living expenses associated with field service are excluded from this warranty.

No coverage, parts or labor, is offered for components that have failed on control **not** being used as specified in Unitrol Electronics published literature, technical sheets, and this direction book.

No warranty coverage will be made on controls that are being used contrary to specifications, that were mechanically or electronically altered by customer or installer, or that were physically damaged after shipment from Unitrol Electronics.

Damages to a control by lightning, flood, or mechanical damage are excluded from this warranty.

Unitrol Electronics assumes no liability for damage to other equipment or injury to personnel due to a failure in the Unitrol Electronics control.

Unitrol Electronics shall not be responsible for any consequential damages of whatever kind.

Expenses involving alteration or installation of a Unitrol Electronics control are not covered in this warranty.

**NO OTHER UNITROL ELECTRONICS INC. WARRANTY, WRITTEN OR IMPLIED, COVERS THIS CONTROL UNLESS IN WRITING AND SIGNED BY AN OFFICER OF UNITROL ELECTRONICS, INC. PRIOR TO SHIPMENT OF PRODUCT.**



# TABLE OF CONTENTS


<b>1</b>	VERIFY YOUR SOFT TOUCH SENSOR BOARD IS CORRECT
<b>2</b>	HOW SYSTEM OPERATES
<b>3</b>	HOSE CONNECTIONS
<b>4</b>	PREPARING RIVETER
<b>6</b>	WIRING CONTROL: CONNECTING SIGNAL PICKUP WIRES
<b>7</b>	SCHEMATIC DRAWING
<b>8</b>	PNEUMATIC DRAWING
<b>9</b>	PNEUMATIC DRAWING WITH 9181-34RCR OPTION
<b>10</b>	DEPTH SWITCH OPTION, 9181-34LSA, 9181-34LSB
<b>12</b>	ADJUSTING SOFT TOUCH VALVES
<b>13</b>	SETTING MAXIMUM DETECT TIME SWITCHES
<b>13</b>	BLANK TIME
<b>13</b>	TESTING ELECTRONIC SYSTEM
<b>14</b>	START-UP PROCEEDURE
<b>15</b>	TESTING RIVETING MANDREL CLOSING FORCE
<b>16</b>	TROUBLE SHOOTING CHART
<b>17</b>	LED INDICATOR LIGHTS
<b>18</b>	SERVICE CONTACT INFORMATION






## VERIFY YOUR SOFT TOUCH SENSOR BOARD IS CORRECT

The SOFT TOUCH sensor board can be configured in several ways. Before turning power on, check to be sure that the three switches are in the MFDC (up) position..

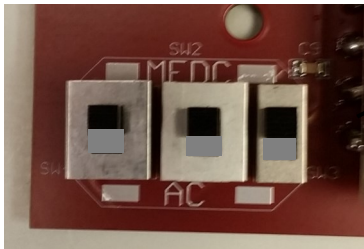

**MFDC POSITION**

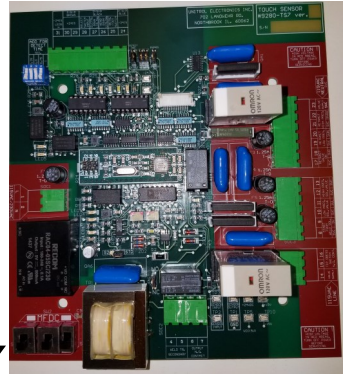

# SOFT TOUCH PINCH POINT PROTECTION SYSTEM FOR INSTALLATION ON PNEUMATIC RIVETING MACHINES

## HOW THE SYSTEM OPERATES

When the voltage from the footswitch goes HIGH, this voltage goes to the 9280-TS7 SOFT TOUCH detection board, terminal #9.

The output terminal #11 (SVL) goes HIGH to turn on solenoid valve SVL.

This closes the riveting mandrel under low force using low air pressure on the forward port of the riveter air cylinder.

The 9280-TS7 board checks input at terminals #4 and #5 to see if the voltage signal drops a minimum value indicating that the riveting mandrel have made contact on a conducting material (continuity detected).

If this contact is NOT sensed within the maximum time setting on the board's DIPswitches\*, the output terminal #11 (SVL) will go LOW and drop out solenoid valve SVL to open the riveting mandrel.

If this contact IS sensed within the maximum time setting:

Terminal #11 (SVL) will continue to be HIGH


Terminal #13 (SVH) will go HIGH

Solenoid valve SVH will be turned ON to start high riveting mandrel pressure.

---


\* The **maximum** time the system uses for detecting continuity is the TOTAL of the four switches set on the DIPswitch block on the upper left corner of the sensor board. Set it for about 1.5X the maximum time it takes to close the mandrel on the part.

**BLANK TIME:** 50% of the DETECT TIME selected will be used by the sensor board to block reaction to continuity during this time. For example, if the **1** and **0.5** DIPswitch paddles are closed (1.5 second selection), continuity in the first 3/4 seconds will not turn on the full force.

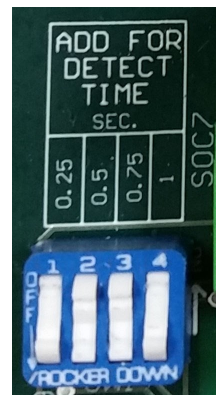

## HOSE CONNECTIONS


**Note: If the riveting machine has an existing solenoid valve or pneumatic foot switch, this system REPLACES these components.**

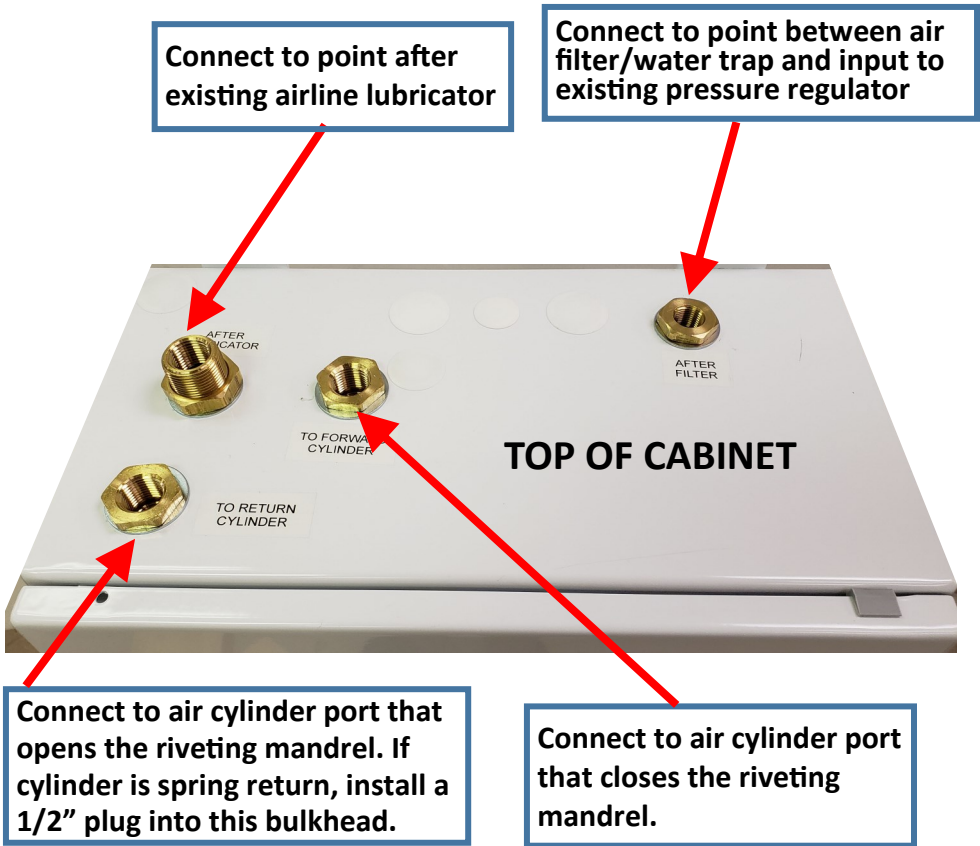

Install two exhaust filters provided with this system into the two bottom ports.

# PREPARING RIVETER

## TOOL BAR TYPE MOUNTING

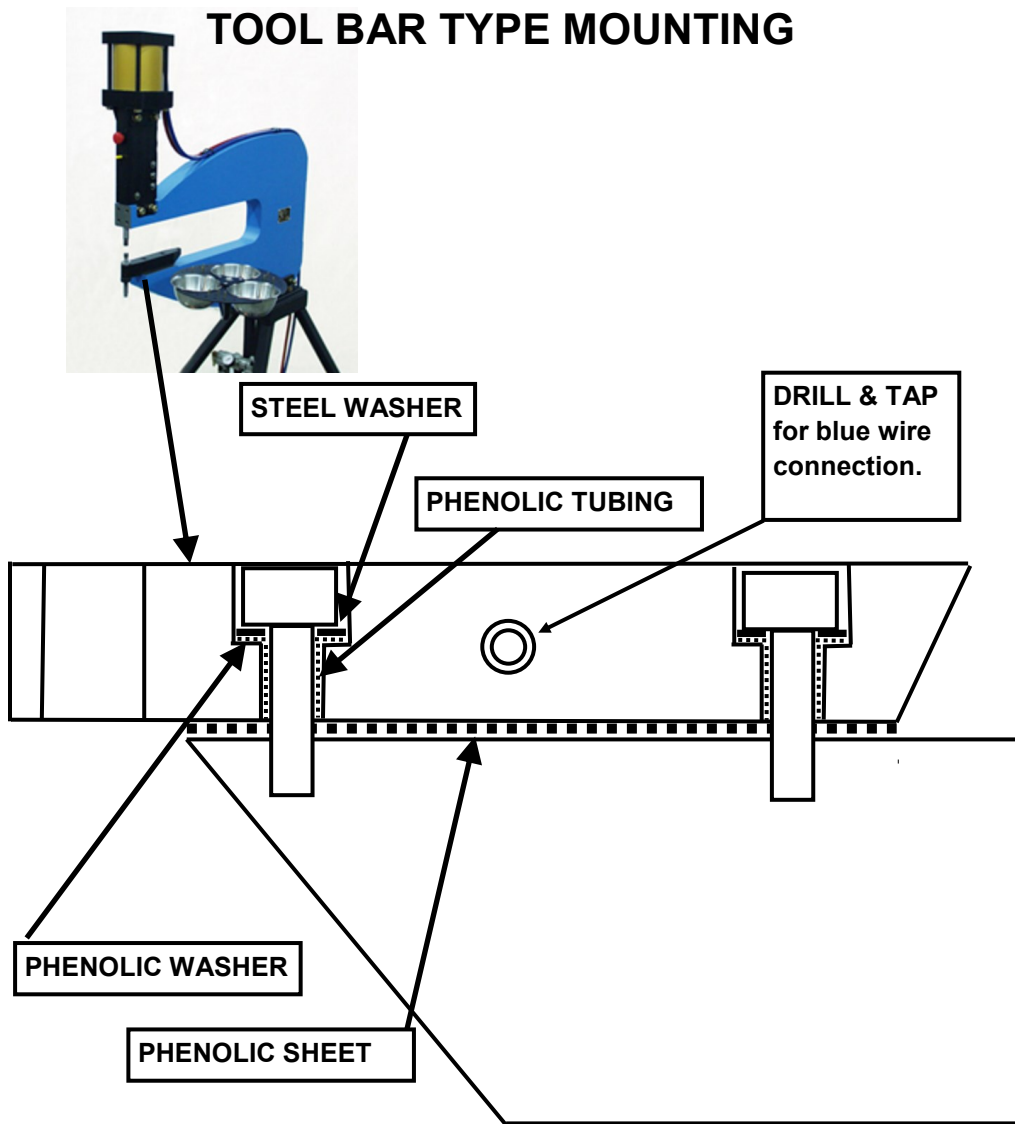



**The tooling bar must be electronically isolated from the riveter frame.**

Counterbore the two screw pockets in the tooling bar so that they will clear the new phenolic tubing, phenolic washers, and steel washers.

Drill and tap a hole in the tooling bar for connection to one of the blue wires from the SOFT TOUCH system.

# PREPARING RIVETER

## DIRECT TOOL MOUNTING TYPE

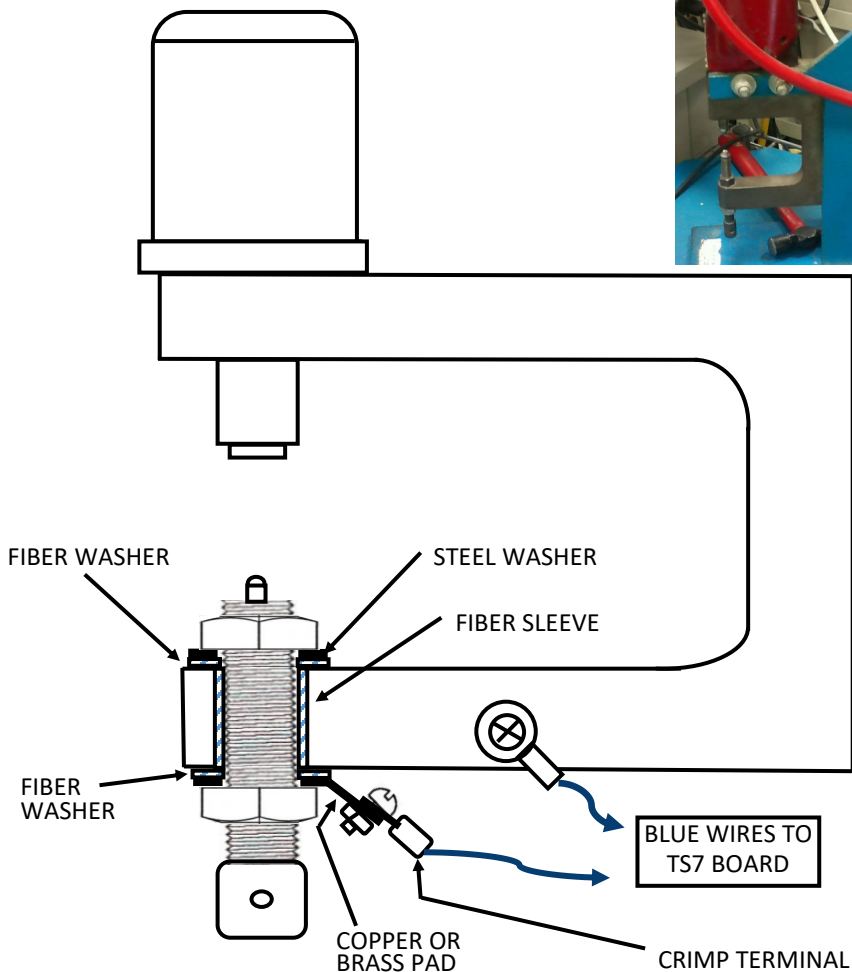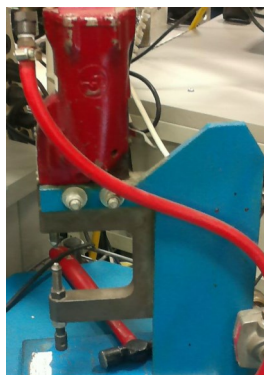

**The lower tooling must be electronically isolated from the riveter frame.**


Bore out hole in bottom of riveter and install phenolic or nylon sleeve and washers.

Drill and tap a hole in the frame and install a crimp terminal with one wire as shown.

Install a copper or brass terminal pad as shown and connect the other blue wire.


## CONNECTING SIGNAL PICKUP WIRES

1. Connect one of the blue wires from the SOFT TOUCH cabinet to a point on the riveter frame.
2. Connect the second blue wire to the lower tool holding bar.

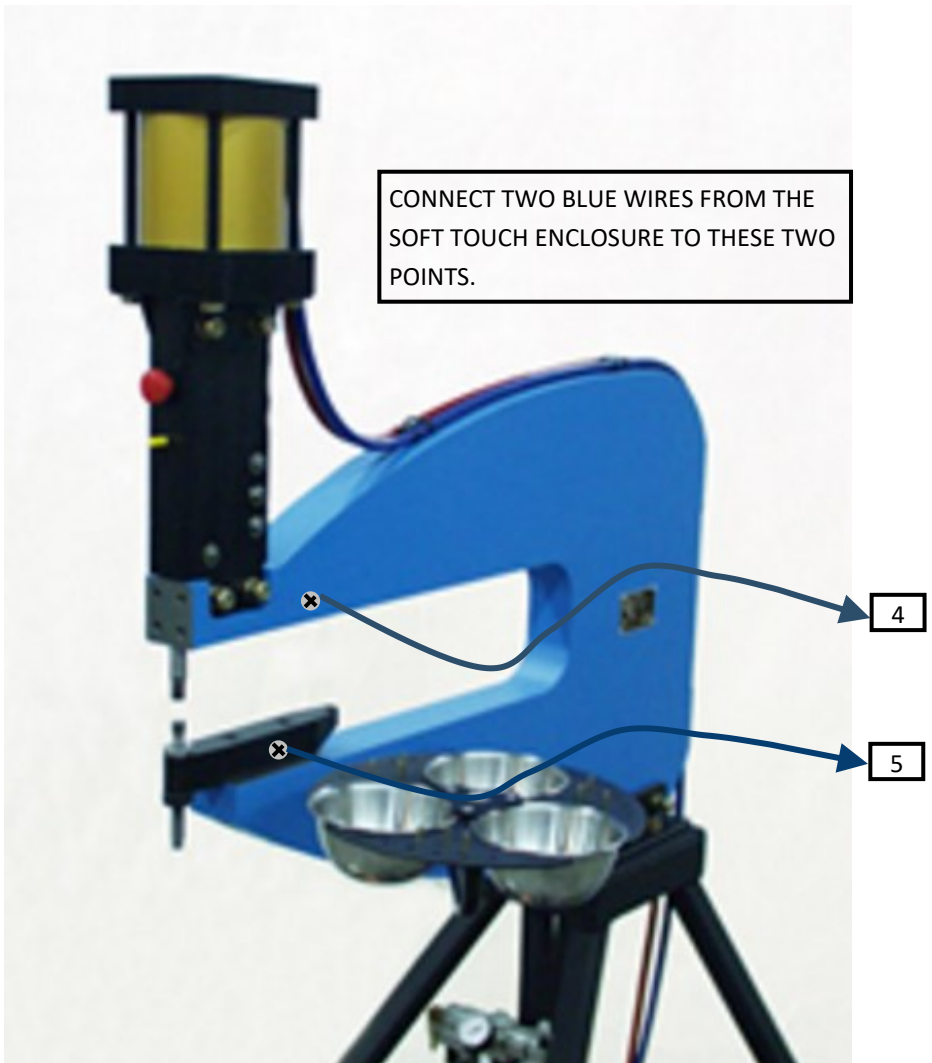


# SCHEMATIC DRAWING

## FACTORY CONNECTIONS

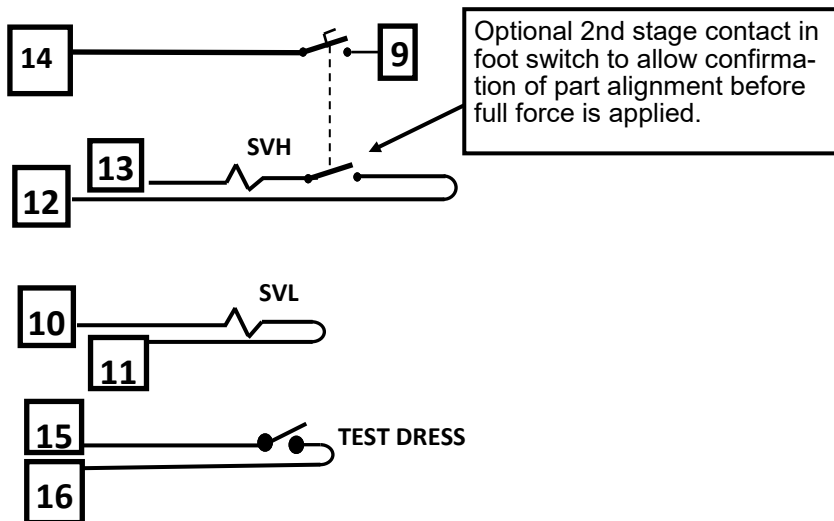


For model 9181-34YM-115RIVET

These units operate on 115VAC power.

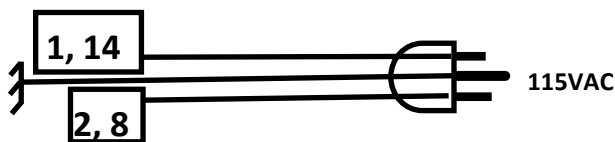


For model 9181-34YM-230RIVET

These units operate on 230VAC power.

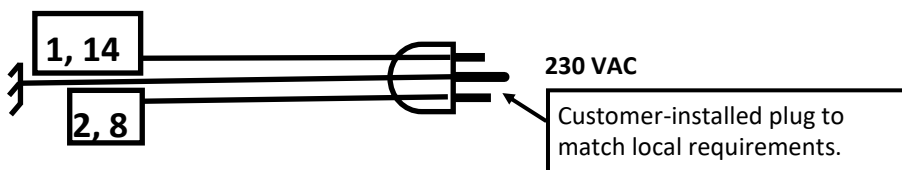


# PNEUMATIC DRAWING

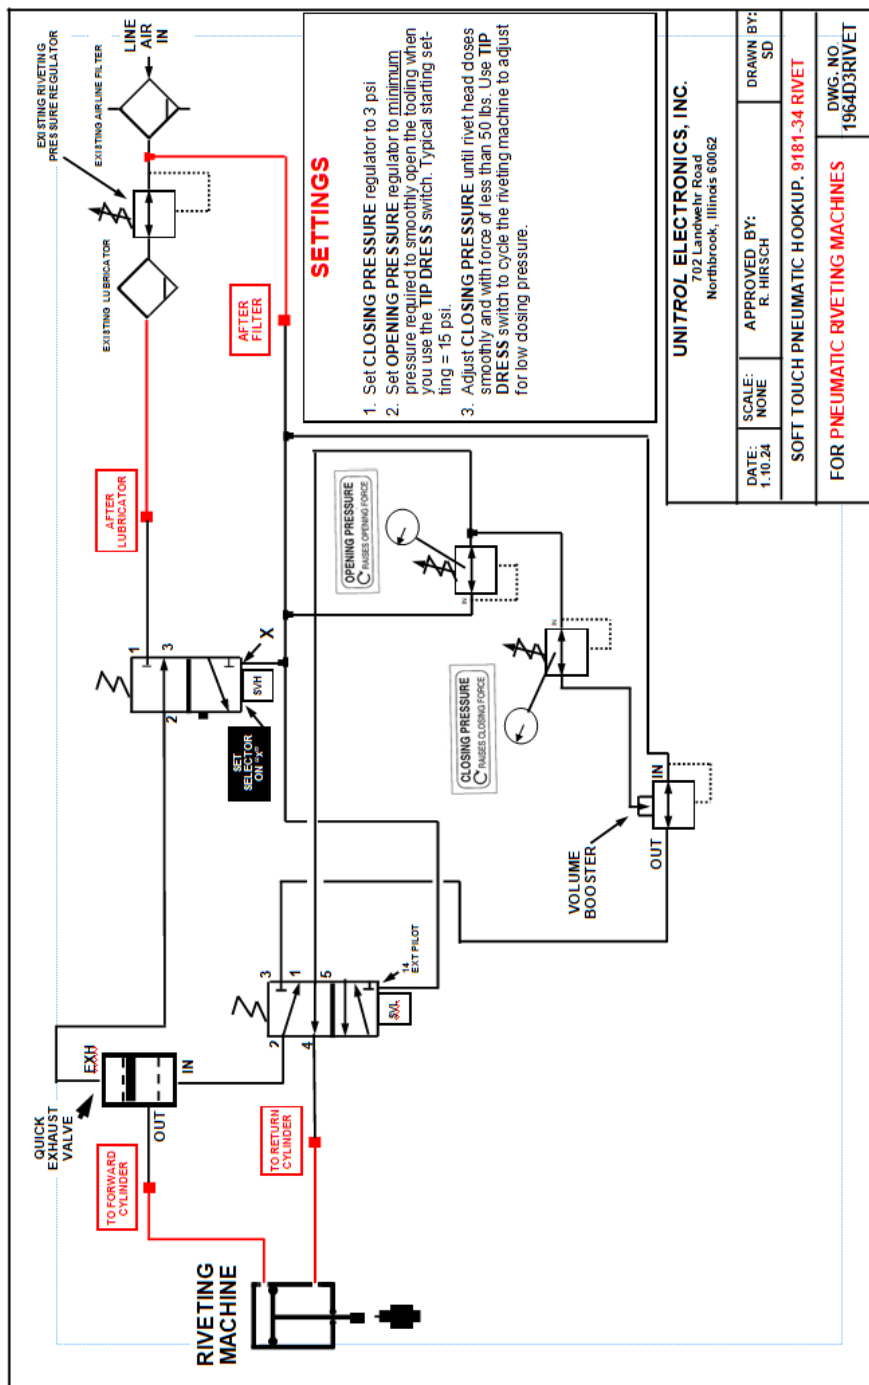

Directions/1964D3RIVET, SOFT TOUCH 9181-34RIVET.pub



PNEUMATIC DRAWING WITH 9181-34RCR OPTION

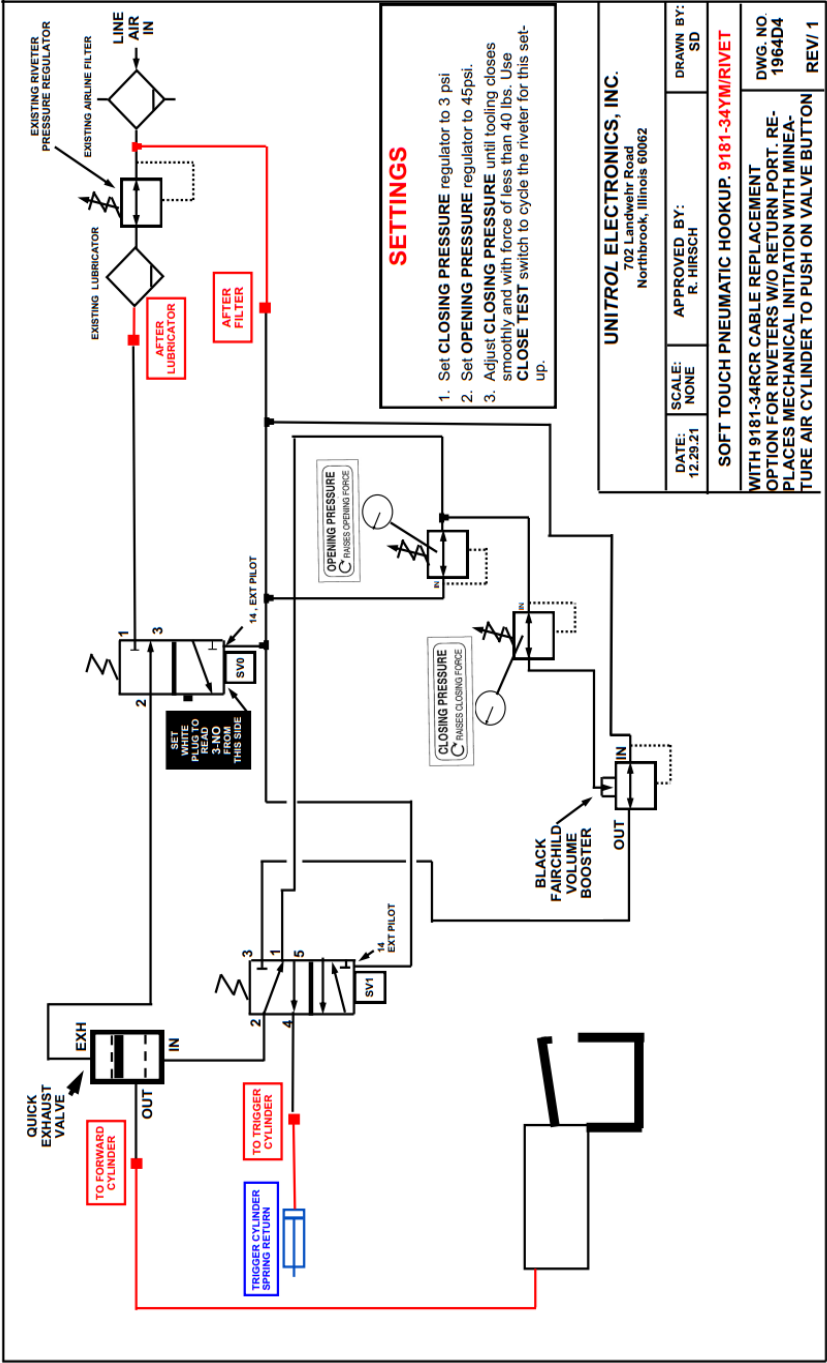

## OPTIONAL DEPTH SWITCH 9181-34LSA, 9181-34LSB

This option allows use of either CONTINUITY DETECTION or closure of a DEPTH SWITCH to turn on the full rivet pressure. It is useful when parts being riveted have a non-conductive coating.



### INSTALLATION:

**9181-34LSA:** Mount the PNP proximity switch that is supplied with this option on the body of the rivet machine using the mounting bar. Modify and bend as needed.

**9181-34LSB:** Mount a customer-supplied mechanical limit switch or PNP proximity switch on the body of the riveting machine.


**BOTH:** Make and install an adjustable cam on the moving part of the riveter that will go in front of this switch when the upper riveting mandrel are less than 1/4" from the lower riveting mandrel.

**NOTE:** If the parts being riveted are very thick, setting the DEPTH SWITCH to close when there is a 1/4" gap between riveting mandrel might not work when the part being riveted is in place. In this case, set the DEPTH SWITCH to close when there is 1/4" gap from the **top of the part** being riveted to the underside of the upper riveting mandrel.

To protect from pinch point injury when a part is **not** between the riveting mandrel, adjust the riveting mandrel holders so that the air cylinder will bottom out when the gap between riveting mandrel is 1/4".

# **OPTIONAL DEPTH SWITCH 9181-34LSA, 9181-34LSB** **continued**

Wire the switch to match the appropriate hookup below.

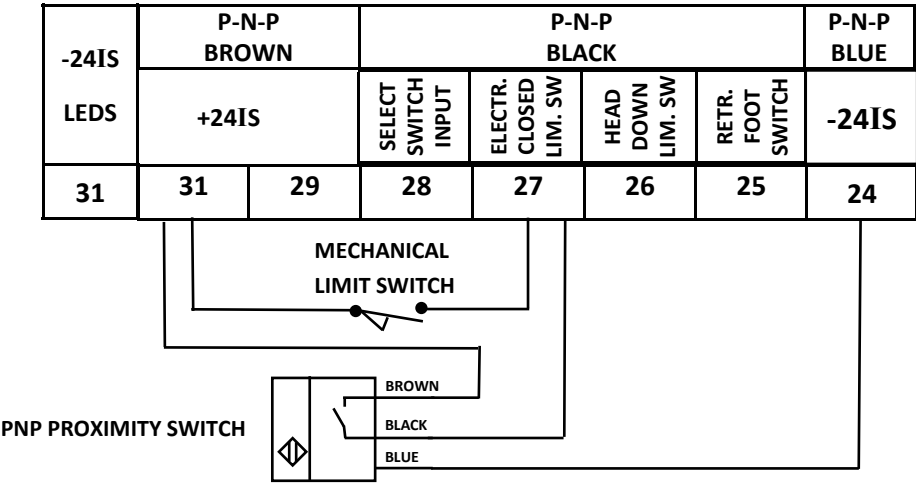

## **USE IN PRODUCTION:**

Turn the key **counter-clockwise** to the **CONTINUITY** position. The yellow panel indicator will glow. In this position, high riveting pressure will only be applied when electrical continuity is detected between the upper and lower riveting mandrels.

Turn the key **clockwise** to the **DEPTH SWITCH** position. The red panel indicator will glow. After initiation, the riveting mandrel will close with low force. If the **DEPTH SWITCH** closes before the maximum **DETECT TIME** (as set on the DIPswitch) has been reached, the **LIMIT SWITCH CLOSED** light will glow on the annunciator panel and the riveting mandrel will go to high force.



**CAUTION:** When the key switch is in the **DEPTH SWITCH** position, the **HIGH MANDREL FORCE** will turn on after the **TEST SWITCH** is closed. This will happen even if a non-conductive material or body part is between the riveting mandrels.

# ADJUSTING THE SOFT TOUCH VALVE SYSTEM

1. Set the **CLOSE** pressure regulator inside the enclosure so that the **CLOSE PRESSURE** gauge on the door is at approximately 3psi.
2. Set the **OPEN** pressure regulator inside the enclosure so that the **OPEN PRESSURE** gauge on the door is at approximately 12 psi.
3. Turn the **TEST** switch TO **TEST CLOSE**. The riveting mandrel should close. If it doesn't, **increase** the **CLOSE** pressure regulator. Check the force between the riveting mandrel and **decrease** this pressure slightly if the force is great enough to crush a wood pencil more than 1/16" in depth.
4. Adjust the **OPEN** pressure regulator so that when the **TEST** switch is turned to **TEST OPEN**, the riveting mandrel opens smoothly. Use the **lowest** setting on this OPEN pressure regulator that will smoothly open the riveting mandrel. This will produce the fastest mandrel closing time.

## SETTING SOFT TOUCH BOARD MAXIMUM DETECT TIME SWITCHES


Locate the four-section **ADD FOR DETECT TIME** DIPswitch on the left side of each SOFT TOUCH board. This switch is marked: 1, .75, .5, and .25 seconds. Set the switches to a value that is about 2 times how long it will take for the riveting mandrel to close. The on-board computer adds the value of these switches. For example, pushing 1 and .5 down to the left side will produce a detection time of 1.5 seconds. This setting is not critical. A typical setting is 1 second. Longer times might be needed for very long stroke cylinders

For example, in the photo below the 0.25 and 1 switch is pushed down toward the top of the board for a total maximum detect time of 1.25 seconds.

Setting all four switches to the OFF position will set the maximum detect time to 5 seconds.

### DETECT BLANK TIME

After the SOFT TOUCH board is initiated, the system will not look for continuity until the DETECT BLANK TIME has been reached. This time is 50% of the time you set on the **ADD FOR DETECT TIME** DIPswitch.

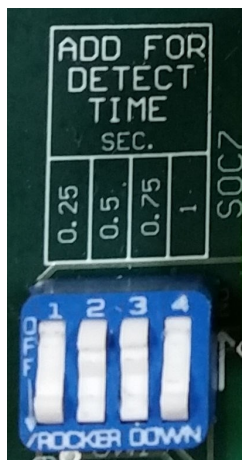


## TESTING THE ELECTRONIC SYSTEM

1. Clean riveting mandrel and lower tool.
2. With nothing between riveting mandrel, close riveting mandrel by turning the **TEST** switch at the bottom of the annunciator panel to **TEST CLOSE**.
3. The riveting mandrel should close. The **Continuity Detected with no Start Signal** LED should start flashing.
4. Turn the switch to **TEST OPEN** and the riveting mandrel will open.

# STARTUP PROCEDURE

1. Turn on power to the SOFT TOUCH control.
2. The SOFT TOUCH annunciator panel should go through a test procedure and then the READY LED should turn on solidly.
3. If the READY LED does flashes slowly or quickly see the trouble shooting section in this direction book.
4. The system should be ready for operation. There is no customer calibration needed now or ever.

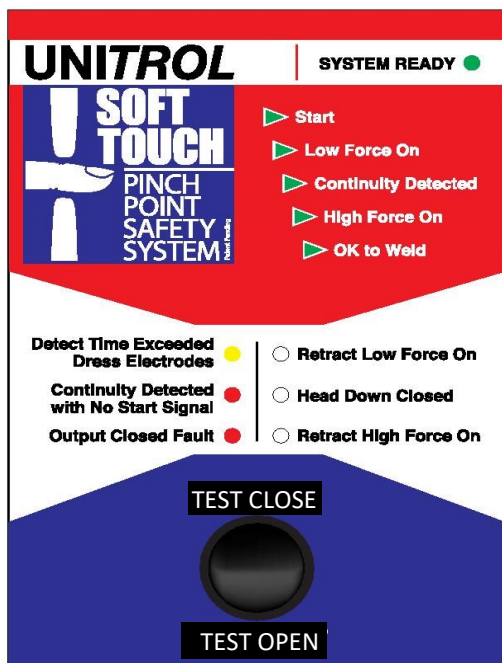

## SUCCESSFUL SEQUENCE WITHOUT LIMIT SWITCH

1. Foot switch control sends voltage to terminal 9 (SV).
2. **START** lights
3. Low Force solenoid valve (SVL) is energized, **Low Force ON** LED lights.
4. Riveting mandrel close
5. Continuity is detected and **Continuity Detected** LED lights.
6. High Force solenoid valve (SVH) is energized, **High Force ON** LED lights.

## UNSUCCESSFUL SEQUENCE

If continuity is not detected within the maximum time set on the DIPswitch, riveting mandrel will **not** get to full force, will open, and the **Detect Time Exceeded, Dress Riveting mandrel** LED will light. Clean the riveting mandrel and try the sequence again. Or check to see if the DIPswitch on the board is set to a long enough time to allow for the riveting mandrel to close.

## TESTING MANDREL CLOSING FORCE

Adjust the pneumatic system to produce safe closing mandrel closing force using the directions on page 9.

Use the TEST switch to close the riveting mandrel each time you make a change in the pressure regulator settings. A successful pneumatic setting will provide a force under 25 pounds between the mandrel and lower tool. There are two methods to check this force:

1. The most precise method is to use a tip force measuring instrument between the riveting mandrel. This produces data that can be recorded on safety records and is less subjective to visual observation. Unfortunately most of these devices do not have any accuracy in the low force ranges. **Do not use an instrument that has poor or unknown accuracy in the low force range.** An excellent device that **can** read the low forces is Tuffaloy model 601-3000DLC. This unit can also be used to read riveting forces up to 3,000 pounds.
2. Place a wood pencil between the riveting mandrel and close using the TEST switch. The riveting mandrel should not dent more than 1/16" into either side. A typical #2 wood office pencil works well. A carpenter's pencil works better since the flat area is much larger.

## TROUBLE SHOOTING CHART

**NOTE: This SOFT TOUCH system will not operate if any fault is detected. **SYSTEM READY** will glow solidly if faults are clear.**

INDICATION	CAUSE	WHAT TO CHECK OR DO
<b>Start</b> LED not on solid	No power to control.  If any fault shown below is detected. The <b>Start</b> LED will only glow solidly when the system is ready for operation.	Be sure that 115V (for model 9181-34YM-115RIVET) or 230VAC (for model 9181-34YM-230RIVET) is at terminals #1 and #2.
<b>Start</b> LED flashing slowly  Or  <b>Continuity Detected with No Start Signal</b> LED on.	Voltage on blue sensor wires too low or not connected.  Insulator missing or some conducting component is connected between insulated tool bar and the riveter frame.	Switches on sensor board are not set to MFDC position. Push all three switches to MFDC position.  Unplug the terminal 4,5,6,7 on the SOFT SENSOR board. Measure resistance between riveting mandrel and riveter frame. If it is not 0, check for bad insulator or some other patch between the insulated tool bar and the riveter frame. Repair or replace as needed.
<b>Start</b> LED flashing quickly	Voltage on blue sensor wires is too high	Contact Unitrol service for instructions.
<b>Detect Time Exceeded. Dress Electrodes</b> LED flashing	Not enough time allowed to close riveting mandrel  Riveting mandrel not making good contact.  Riveting mandrel doesn't touch when riveter air cylinder is fully extended.	Increase DIPswitch time. Remember that this maximum time is the <u>addition</u> of all switches pushed down towards the time numbers (.25sec, .5 sec, .75sec, 1 sec)  Clean riveting mandrel and lower tool or check part being joined.  Adjust riveter so that there is at least a 1/4" left in the air cylinder travel when the riveting mandrel touch.
<b>Output Closed Fault</b> LED is on	Output relay K4 is mechanically closed (welded contacts)	Replace K4 relay.



## SOFT TOUCH SENSOR BOARD TS6 AND TS7

## SOFT TOUCH TS-6 TOUCH SENSOR BOARD

## INDICATOR LIGHTS

LED14 (GREEN):  
IS ON WHEN  
RETR. FOOT SWITCH  
CONTACT IS CLOSED

LED8 (BLUE):  
IS ON WHEN  
RETRACT VALVE ON  
INPUT IS HIGH  
OR  
RETR. FOOT SWITCH  
CONTACT IS CLOSED

**NOTE: FOR TS-5 BOARDS, LED 6, 7, 8, 9 14, AND 15 ARE ALL GREEN.**

LED6 (YELLOW): IS ON  
WHEN  
ELECTR. CLOSED LIM. SW.  
CONTACT IS CLOSED

LED7 (RED): IS ON WHEN  
SELECT SWITCH INPUT  
CONTACT IS CLOSED

100mA fuse for 24VIS  
ISOLATED VOLTAGE. USED  
FOR OUTSIDE SWITCHES

**LED2:  
(ORANGE): 24VIS  
ISOLATED VOLTAGE. USED  
FOR OUTSIDE SWITCHES**

**LED5 (ORANGE):  
24VDC USED FOR  
ELECTRONIC  
CIRCUITRY ON THIS BOARD**

**LED3 (ORANGE): +15VDC**

**LED4 (ORANGE):-15VDC**

**LED1 (ORANGE): +5VDC**

**LED16 (WHITE):**  
HIGH GAIN AMPLIFIER IS ON.  
FOR AC UNITS: INDICATES  
THAT SENSOR INPUT VOLTAGE  
IS UNDER 300mV.

**FOR MFDC UNITS: THIS IS THE NORMAL CONDITION.**

LED17 (RED):  
K1 SPURIOUS OPERATION  
RELAY IS ENERGIZED


WINDOW TURNS RED  
WHEN  
START FROM WELD SOL.  
INPUT VOLTAGE IS HIGH

LED13 (RED):  
OUTPUT N.O. CONTACT  
IS CLOSED.

**CONTACT CLOSURE TELLS CONTROL TO START WELD SEQUENCE.**  
**JPS IN "STD": LED WILL BE OFF DURING**  
**STANDBY AND TURN ON AT CONTINUITY.**  
**JPS IN "SQ": LED WILL BE ON DURING**

LED512 (BLUE):  
OUTPUT N.O. CONTACT  
IS OPEN.  
JP5 IN "STD": THIS IS THE  
NORMAL STAND-BY CONDI-  
TION.  
JP5 IN "S2": THIS WILL BE  
OFF UNTIL SV INPUT. THEN

WINDOW TURNS RED  
WHEN  
RETRACT VALVE ON  
INPUT IS HIGH  
OR

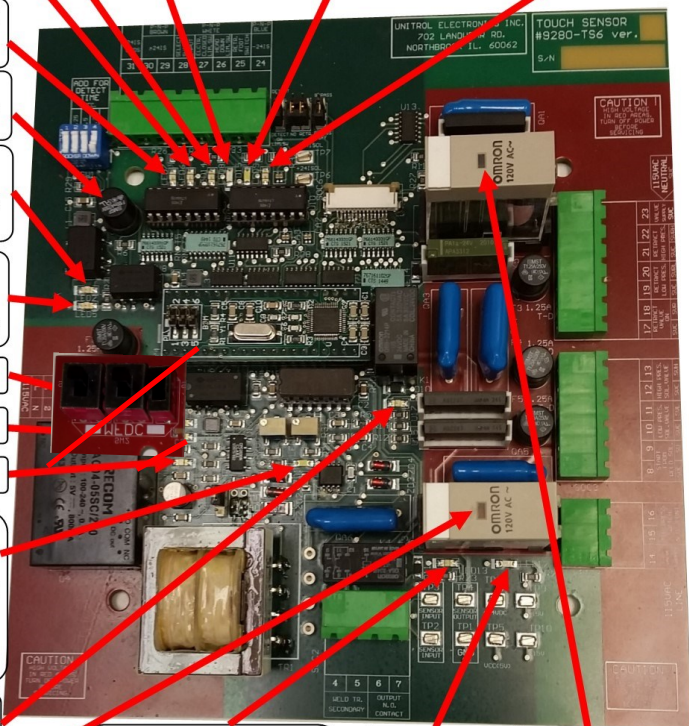

**Having trouble or need answers to your questions?**

**Call: Unitrol tech support**

**847-480-0115, M-F 9:00 - 5:00 CT.**

**Or Email at:**

**[techsupport@unitrol-electronics.com](mailto:techsupport@unitrol-electronics.com)**

**Unitrol supplies free phone support for the life of this and all their products.**



UNITROL ELECTRONICS, INC.  
702 LANDWEHR ROAD  
NORTHBROOK, IL 60062  
847-480-0115  
[techsupport@unitrol-electronics.com](mailto:techsupport@unitrol-electronics.com)